General safety instructions

All warranty claims will be void in the event of damage or loss caused by failure to follow this operation instructions/quick start guide. We accept no liability for personal injury or damage to property caused by improper use or failure to observe the safety instructions. In these cases, the warranty will lapse. For safety and authorisation purposes, it is not permitted to modify or convert the device.

- 1. Keep all parts out of reach of young children.
- 2. Do not install near other electronic equipment such as computers, TV, VCRs, as this can transmit interference.
- 3. Do not disassemble or open.
- 4. Do not spray water on the indoor unit.
- 5. Do not overload wall outlets or extension cords.
- 6. Do not drop or shock the system.
- 7. Unplug the power cord from the wall outlet when the system has not been operating for a long period of time is used.
- 8. Do not place an open flame (e.g. burning candles) on/near the system.
- 9. Do not place water-filled objects (e.g. vases) on/near the system.
- 10. Do not cover ventilation holes.
- 11. If supplied, keep batteries out of the reach of children. Batteries not swallow. If a cell or battery is swallowed, immediately contact a physician. Caution, risk of explosion if Battery is replaced by an incorrect type. Dispose of used batteries according to the instructions

Maintenance

The units are maintenance-free, so never open them. The guarantee is void when the unit is opened. Clean the outside of the unit only with a soft, dry cloth or brush. Prior to cleaning, the units must be removed from all sources of voltage. Do not use carboxylic cleaning agents, petrol, alcohol or the like. These will damage the surfaces of the units. In addition, the vapours are dangerous to health and explosive. Do not use tools with sharp edges, screwdrivers, metal brushes or the like for cleaning. General warning: Protect the batteries (if supplied) from fire, excessive heat and sunlight.

Symbols:

Recycling and disposal: The WEEE symbol (a) means that this product and batteries must be disposed separately from other household waste. When it reaches its end of life, take it to a designated waste collection point in your area to guarantee a safe disposal or recycling. Protect the environment, human health and natural resources! Read the manual (b) before use and store it in a safe place for future use and maintenance.

ELRO Europe | www.elro.eu Postbus 9607 - Box E800 1006 GC Amsterdam - The Netherlands





Quick Start Guide EN



CAMERA SECURITY SET NIGHT VISION

Home is not a place, it's a feeling

Introduction

Congratulations with your new ELRO camera Set, featuring 7" (18 cm) colour screen plus PIR activated 720P HD Resolution camera with Infra-Red LEDs to give Nightview, including SD Card recording feature. We want that you enjoy this ELRO product without having to read extensive paperwork, so this quick start guide will help you to get started, make camera and monitor work together and indicate the most important features. You will also learn which APP you can use for remote access. If you need more detailed information, visit our website www.elro.eu for a more detailed manual, where all features of the system and the APP are described in full!

Besides the mounting materials (dowels and srews), the set contains the following parts:

- * Monitor 7"/18cm
- 720P HD wireless camera
- AC adaptor 9V (camera)
- AC adaptor 5V (monitor)
- Network cable
- Quick Start Guide

Up to 3 additional cameras can be added to this 4-Channel sytem. The compatibel extra camera for this kit is: CC30RXX11 720P HD Night Vision Camera with motion detector

Get started

(Default password 000000)

- 1. Connect the 9V power adapter tot he camera and plug it into power
- 2. Connect the 5V power adapter into the monitor and plug it into power. To turn ON and OFF the monitor, push and hold the power button that is located in the middle on top of the monitor for at least 5 seconds! Pushing this button shortly will enter the Scan Mode to find paired cameras.
- 3. The camera is already pre-paired to the monitor; if you find this not working, or you want to change to another channel, go to:





 
Pairing

Choose and tab the channel to which you want to add or change the camera to and follow the on-screen instruction to press the "pair" button at the back of the camera within 30 seconds! You will now see the camera picture on the screen.

 
Before Mounting the camera to the wall, check if the intended mounting position gives the wanted surveillance area and has good wireless connection to the monitor.

Explanation monitor icons

Yellow: not connected to the internet.







$\left(+ \right)$	3.	NEW RECORD INDICATOR
		New recordings are saved on the SD card.







 


8. CHANNEL INDICATOR 0. Displays the current channel you are viewing.


- 9. BATTERY INDICATOR Flashing Red; low battery Green: full battery Flashing Green; charging battery
- **10. ZOOM INDICATOR** (+)Tap 1 of the 5 areas. Tap the icon again to exit Zoom mode.



- 12 TALK BACK INDICATOR ģ Press and hold to talk back through the camera.
- 13. NEW DOWNLOAD



SEQ 14. SEQUENCE INDICATOR Auto switch mode; it will change channels automatically.

 



17. POP-UP MENU TAB Tap to access the pop up menu system.

ELRO Monitoring App

- 1. Download and install the free ELRO Monitoring app. (App Store / Google Playstore)
- 2. Your Monitor must be connected to your home router with included network cable!
- 3. For adding a camera, just follow the instructions from the APP and use either the UID below the QR-Code on the monitor or you simply scan the QR-Code itself.





UID-code	NKCZEJJ11L3MB272111A			
Add Device	е			
Device Setting				
UID:	NKCZEJJ11L Scan	3MB272111A Search		
Name:	ELRO Monito	ring		
Password:,				
Enter the Default password here 000000 in. You can later in the app Create your own password.				
ОК		Cancel		