



HOME2 ALARM SYSTEM



REMOTE CONTROL

MANUAL

AS98R


Home is not a place, it's a feeling

REMOTE CONTROL AS98R

The remote control allows you to arm the alarm remotely before entering or leaving the house. A compact design for attaching to a key ring or for use in the car. The buttons on the remote control must be pressed for approximately 2 seconds; the LED (1) will change from red to green before the signal is sent to the base unit. This is a safety feature to prevent the buttons from being pressed accidentally. Also known as pocket safety.

What is what

1. LED
2. ON = Activated
3. OFF = Deactivated
4. HOME mode = Partial activation
5. S.O.S. = Alarm via the siren of the base unit
6. Battery compartment

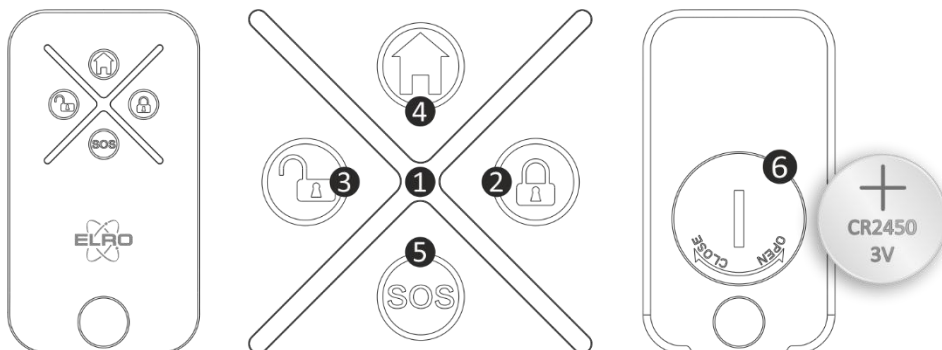

Battery

Install the CR2450 button cell battery, ensuring that the positive terminal is facing upwards in the battery compartment, as shown in the image above.

Pairing

1. Go to 'Device' and tap '+ Add Device' in the app, then select the option Add Sub-device;
2. Give the item a name, scan the QR code (or enter the ID number manually), select or create a Room and a Group/Area, and proceed to the next step;
3. Tap OK, then press and hold the 'Turn on' and 'Turn off' buttons for 3-4 seconds; the green LED will flash and enter configuration mode.
4. Wait until the remote control has been successfully added; you will hear a 'ding dong' sound.

Note: If the connection fails on the first attempt, try again after 10 seconds.

Replacing the battery

Set the AS98S alarm system to the OFF position. Use the new battery to open the battery compartment, slide the empty battery out of the holder and insert a new 3V CR2450 battery with the '+' facing upwards.

Specifications

Wireless protocol	: FSK	Frequency	: 868/433MHz
Battery	: DC3V type CR2450	Battery life	: 3 years (10 times per day)
Wireless distance	: 400m/800m (open air, without obstacles)	Operating temp.	: -10°C ~ +55°C
Relative humidity	: 95%RH	Product dimensions	: 40.5 x 72.5 x 10mm

Symbolen



Recycling and disposal: The WEEE symbol indicates that this product and its batteries must be disposed of separately from household waste. When this product reaches the end of its service life, take it to a designated waste collection point in your area to ensure safe disposal or recycling. Protect the environment and public health and use natural resources responsibly!



Read the user manual and keep it in a safe place for future use and maintenance.



<https://www.elro.eu/en/klantenservice/garantie-en-klachten>

The product warranty is valid for 2 years after purchase and does not apply to the pre-installed battery or batteries. If the device is not functioning correctly, please contact customer service first.



ELRO Europe | www.elro.eu
Postbus 9607 - Box E800
1006 GC Amsterdam - Netherlands



The EU Declaration of Conformity for this product is available at:

www.elro.eu/compliance

GENERAL SAFETY INSTRUCTIONS AND WARNINGS

- Use the product only for its intended purpose and as described in this document. Read this information carefully before using the product.
 - Keep this booklet for future reference. Incorrect use may result in danger or serious injury.
 - If you are installing this product for others, do not forget to leave the manual or a copy of it for the end user.
 - This product is intended for indoor use only.
 - This product is not a toy and must be kept out of the reach of children.
 - Keep packaging materials (plastic bags, cardboard buffers, etc.) out of the reach of children. Packaging materials are not toys. Plastic bags and films can pose a suffocation hazard. Thin films can stick to the nose and mouth and obstruct breathing.
 - Before connecting the device, check that the voltage indicated on the adapter corresponds to the local mains voltage.
 - Do not remove any markings or make any changes to the adapter, as this may create a dangerous situation.
 - Only use the adapter supplied.
 - If the adapter is damaged, always replace it (or have it replaced) with an adapter of the original type to avoid danger.
 - If batteries are damaged or leaking, avoid contact with the skin or eyes. If the product does come into contact with the skin or eyes, rinse immediately with water and seek medical attention.
 - If the product becomes very hot, emits an abnormal odour, changes colour or takes much longer than usual to charge, do not use or charge the product. Contact a specialist.
 - Incorrect batteries or improper use can lead to corrosion or battery leakage, which can result in personal injury or damage to the product. Only use the type of batteries specified in this manual.
 - If you suspect that batteries have been swallowed or placed in any part of the body, seek medical attention immediately.
 - DO NOT use the device if the battery unit casing is damaged, swollen or corroded. Examples include, but are not limited to, leaks, odours, dents, rust, corrosion, cracks, swelling, melting and scratches.
 - Keep cells and batteries clean and dry.
 - Dispose of used cells or batteries immediately in accordance with regulations.
 - Do not open the casing of this product to prevent electric shock.
 - Ensure your hands are dry when handling adapters, plugs or power cords, disconnecting equipment or switching it on or off.
 - Disconnect the product from the power source and other equipment if problems occur.
 - Do not clean while the device is connected to the mains. Use a soft, clean and dry cloth when cleaning to prevent damage. Do not use (aggressive and/or chemical) cleaning agents or abrasives.
 - Do not attempt to repair or modify the electrical or mechanical parts of this product, as doing so will void the warranty.
 - Do not reconstruct, repair or disassemble this product yourself. This may lead to malfunctions and electric shocks.
 - To reduce the risk of falling, take extra care when using a ladder or similar equipment to install parts or accessories for this product.
 - This product contains a loud siren. Do not stand near the siren when it is activated. Close exposure can damage your hearing. Wear hearing protection when testing the alarm.
-
-